





M.O.S.S DRAWER SYSTEM
UNPACKING


Contents:

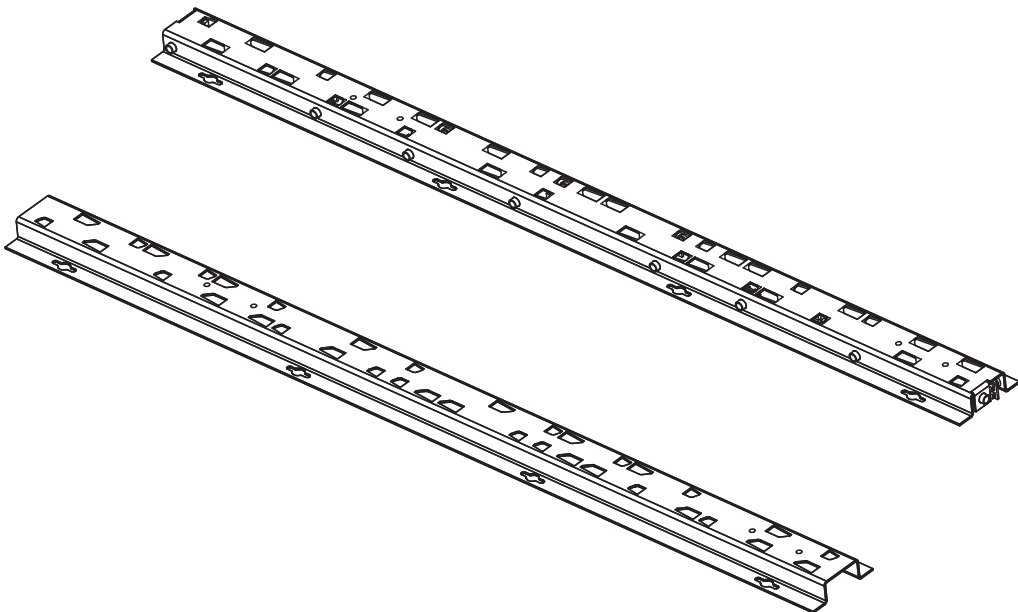


2 - METAL SUPPORT BRACKETS

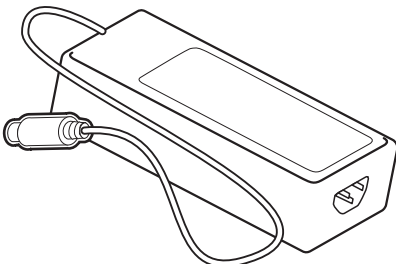


1 - TRANSFORMER

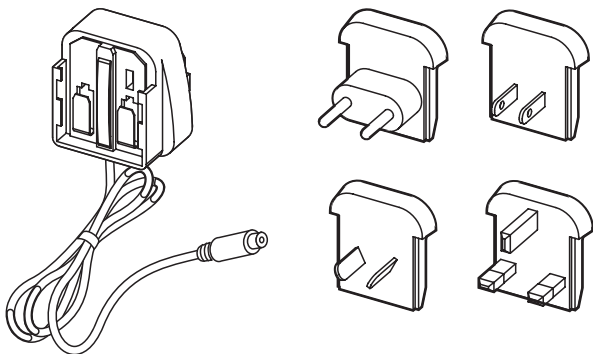

4 - PLUGS FOR
TRANSFORMER
*[SELECT ACCORDING
TO YOUR LOCAL POWER SUPPLY]*

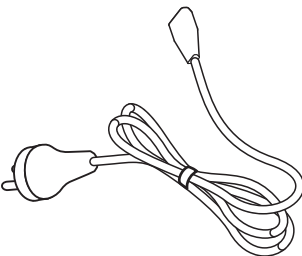

1 - POWER CORD FOR
TRANSFORMER

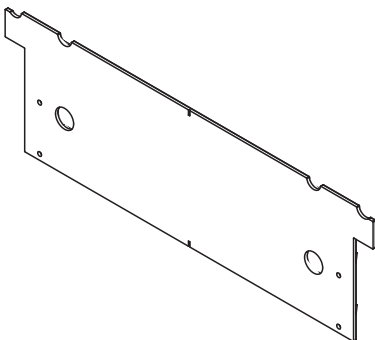


2 - PLASTIC FIXTURES FOR UPRIGHT
ASSEMBLY IN THE CABINET
[WILL BE SHIPPED SEPARATELY]




M.O.S.S DRAWER SYSTEM
POSITIONING OF METAL SUPPORT BRACKETS

4 or 6 Drawers Setup

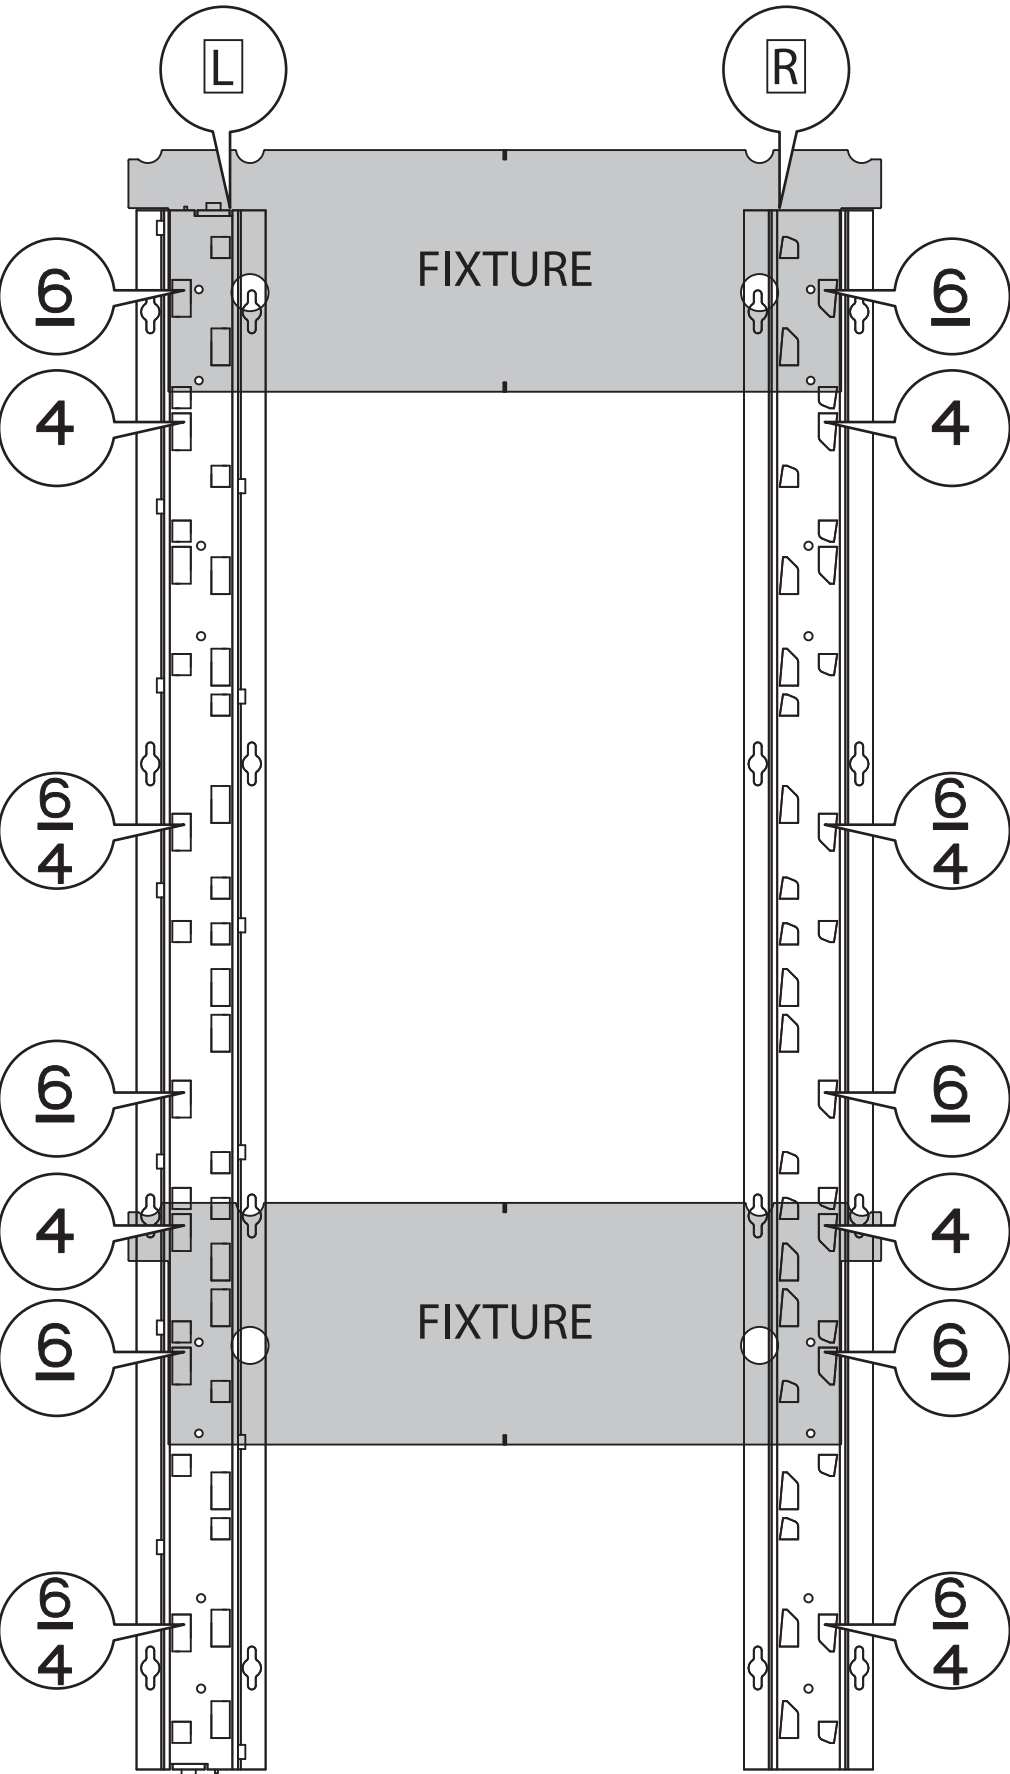

5 or 7 Drawers Setup

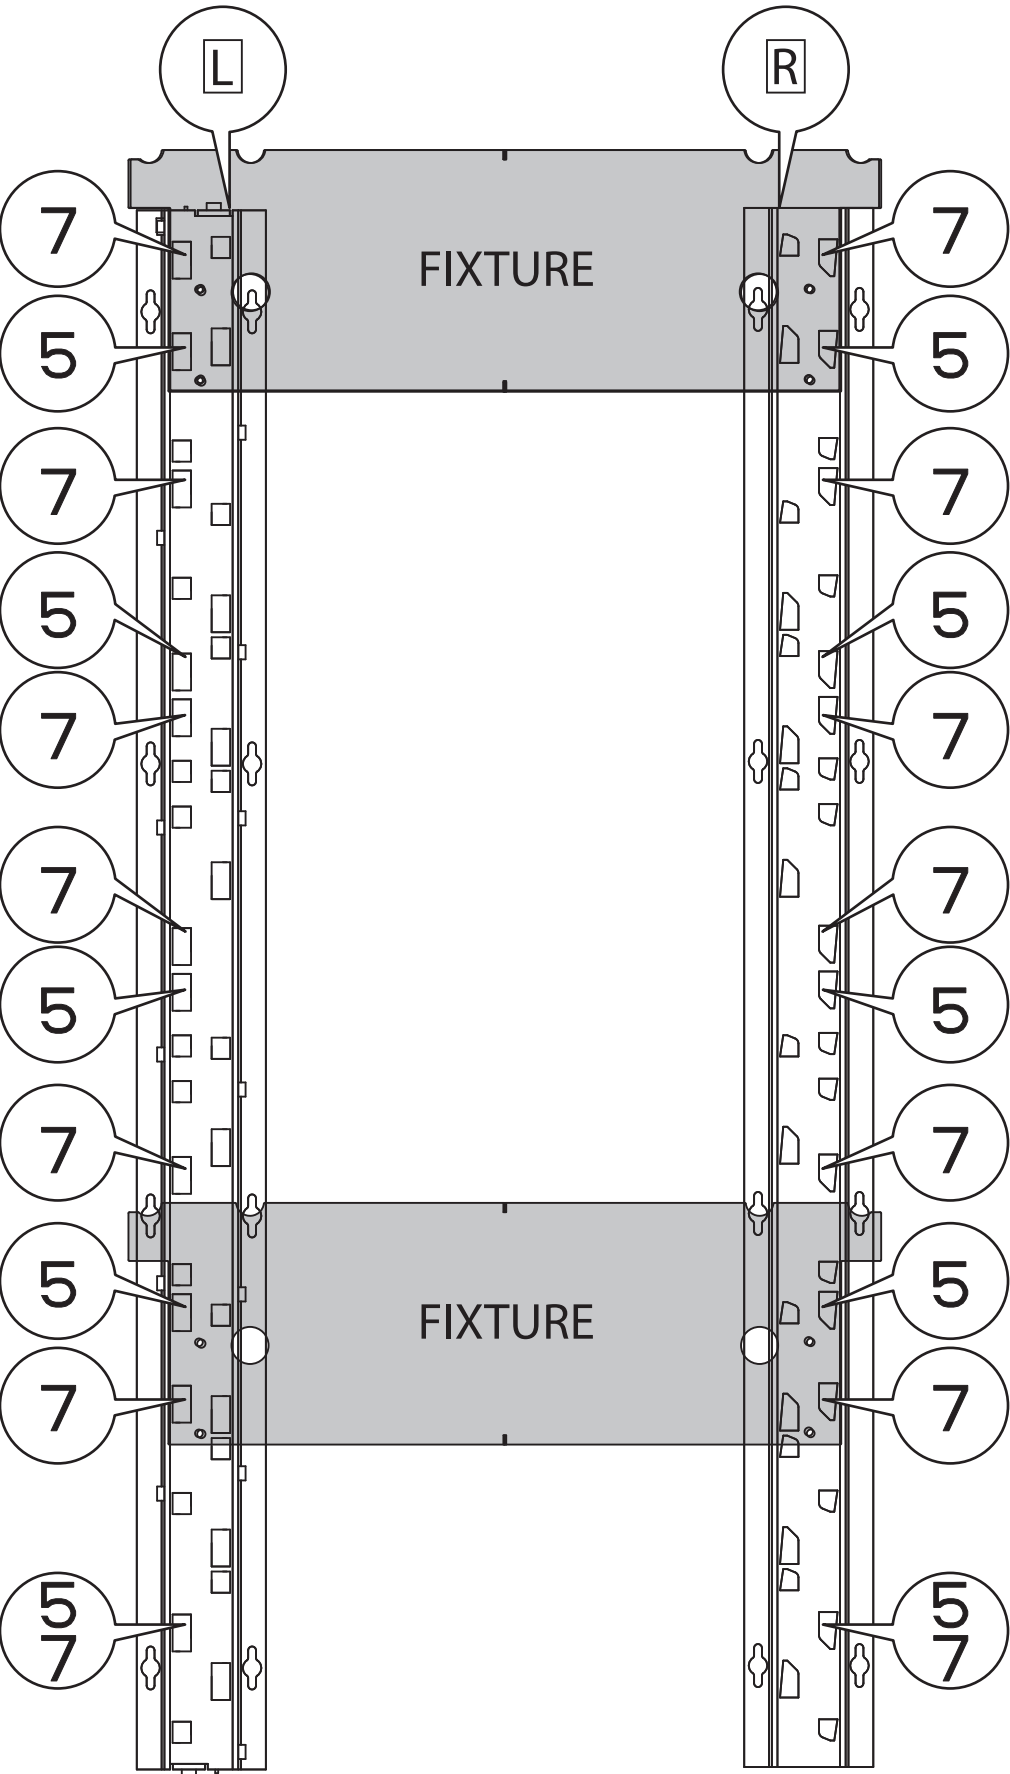

REFER TO M.A.C MERCHANDISING GUIDELINES TO DETERMINE HOW MANY DRAWERS OR SHELVES ARE NEEDED FOR THE CABINET YOU ARE INSTALLING.
EACH CABINET REQUIRES EITHER 4,5,6 OR 7 DRAWERS [OR 4 SHELVES] DEPENDING ON PRODUCT SELECTION TO BE DISPLAYED.

LOOK CLOSELY AT THE METAL SUPPORT BRACKETS BEFORE INSTALLING THEN IN THE CABINET - THE NUMBERS PRINTED ON THEM MUST BE ORIENTED RIGHT WAY UP TO GIVE CORRECT PRODUCT POSITIONS.

FOR 4 OR 6 DRAWER ARRANGEMENT MAKE SURE PRINTED NUMBER 4 AND 6 ARE RIGHT WAY UP.


FOR 5 OR 7 DRAWER ARRANGEMENT MAKE SURE PRINTED NUMBER 5 AND 7 ARE RIGHT WAY UP.

MAKE SURE METAL SUPPORT BRACKETS ARE POSITIONED ON CORRECT SIDE OF CABINET [PRINTED LETTERS L AND R INDICATE LEFT/RIGHT BRACKETS]




M.O.S.S DRAWER SYSTEM
INSTALLATION OF METAL SUPPORT BRACKETS


MAKE SURE TRANSFORMER HAS BEEN INSTALLED
IN TOP STORAGE AREA OF CABINET

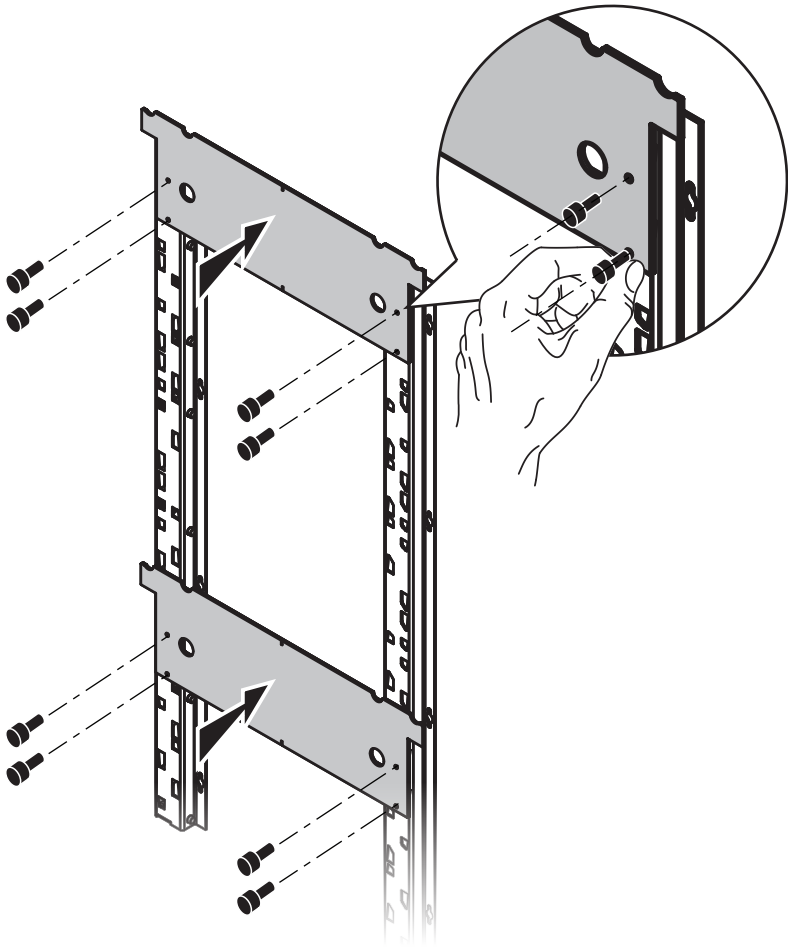


USE THUMB SCREWS TO ASSEMBLE
THE FIXTURES ON THE UPRIGHTS.

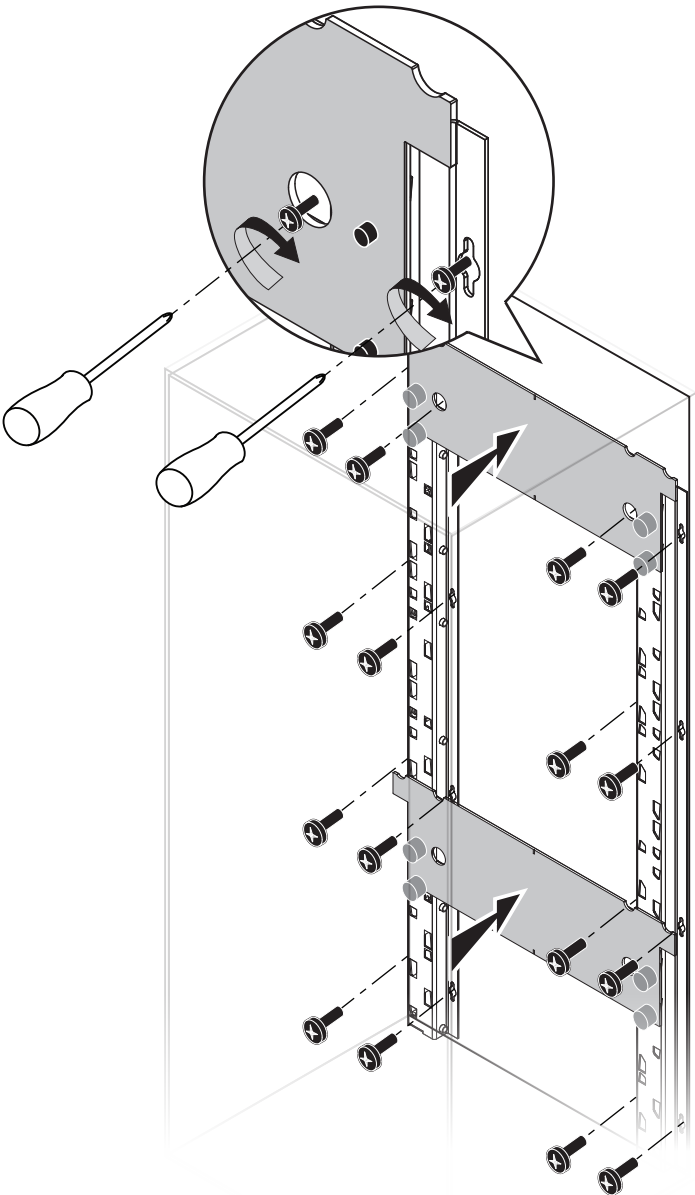

LOCATE THE UPRIGHTS INTO THE TOP POSITION
INSIDE OF THE CABINET, ENSURE BRACKETS ARE
PERFECTLY VERTICAL BEFORE INSTALLING.

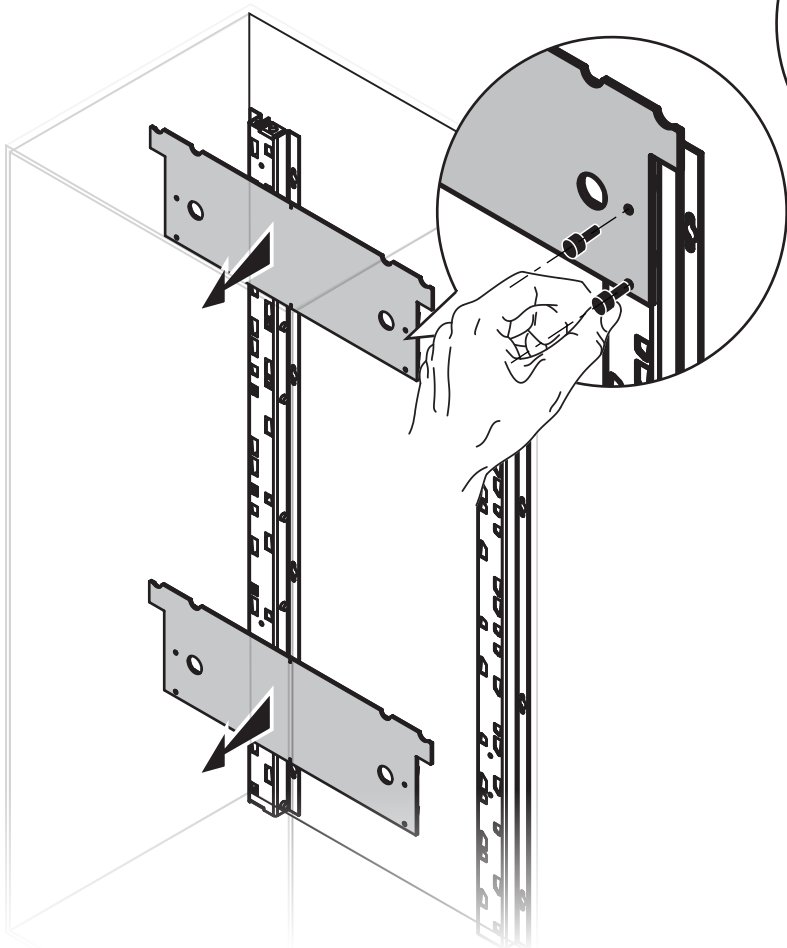

REMOVE PLASTIC FIXTURES.

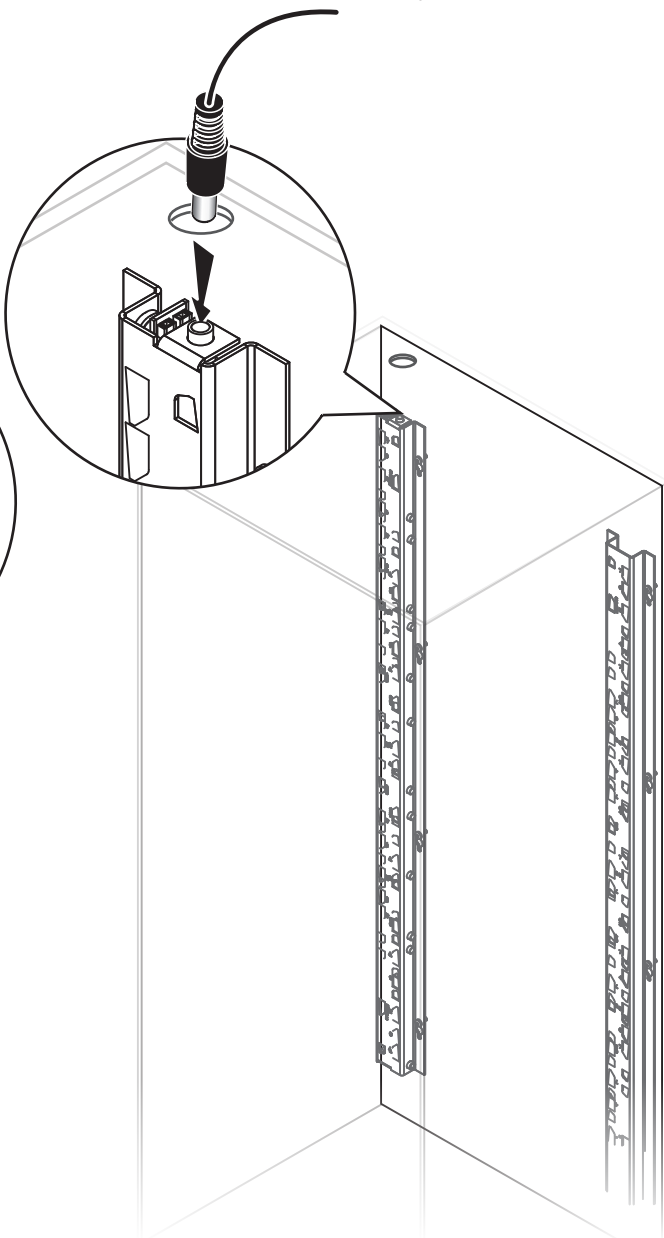


PLUG CABLE JACK FROM TRANSFORMER INTO SOCKET
AT TOP OF LEFT HAND BRACKET.



M.O.S.S DRAWER SYSTEM
INSTALLATION OF DRAWERS & SHELVES


PLEASE REFER TO **MAC** MERCHANDISING
GUIDELINES FOR CORRECT PLACEMENT OF PRODUCT.

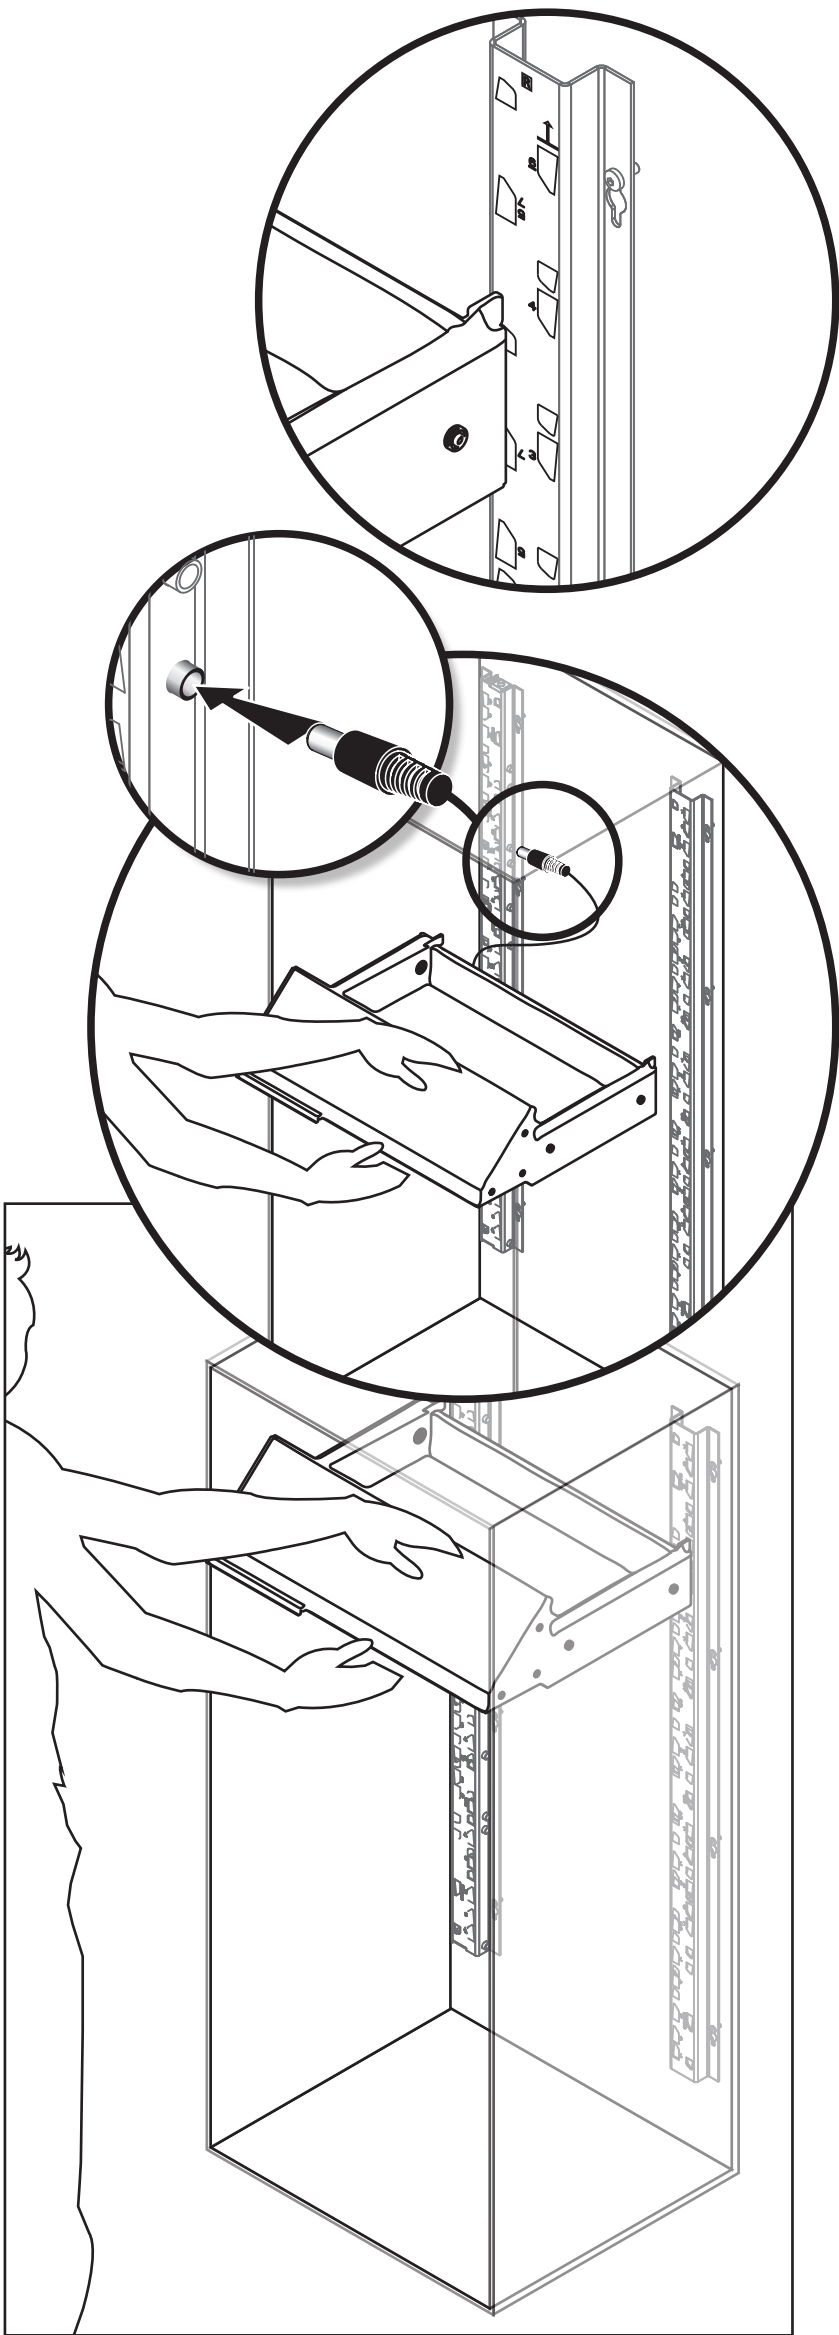

INSERT DRAWER'S SUPPORT HOOKS INTO
APPROPRIATE NUMBERED SLOTS IN SUPPORT
BRACKET.

HOLD DRAWER [OR SHELF] AGAINST METAL
SUPPORT BRACKETS SO THAT HOOKS AT REAR
ARE ALIGNED WITH NUMBERED SLOTS
MATCHING NUMBER OF DRAWERS IN CABINET.

PLUG JACK ON DRAWER'S ELECTRICAL
CABLE INTO SOCKET ON EDGE
OF LEFT HAND SUPPORT BRACKET.

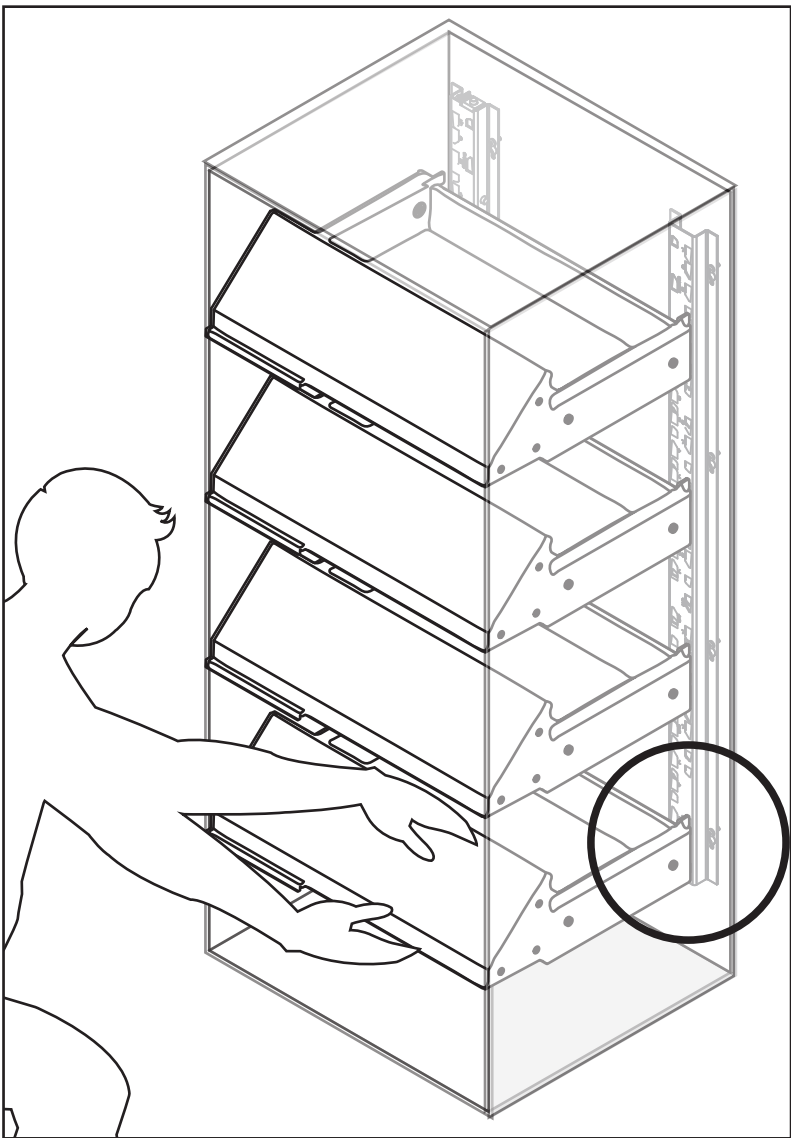

REPEAT PROCESS FOR EACH ADDITIONAL
DRAWER [OR SHELF].