


# MU REDESIGN CLINIQUE

## HOW TO INSTALL A MODULE IN CSP DRAWERS

**Please fill the full drawer with locators to optimize the use**

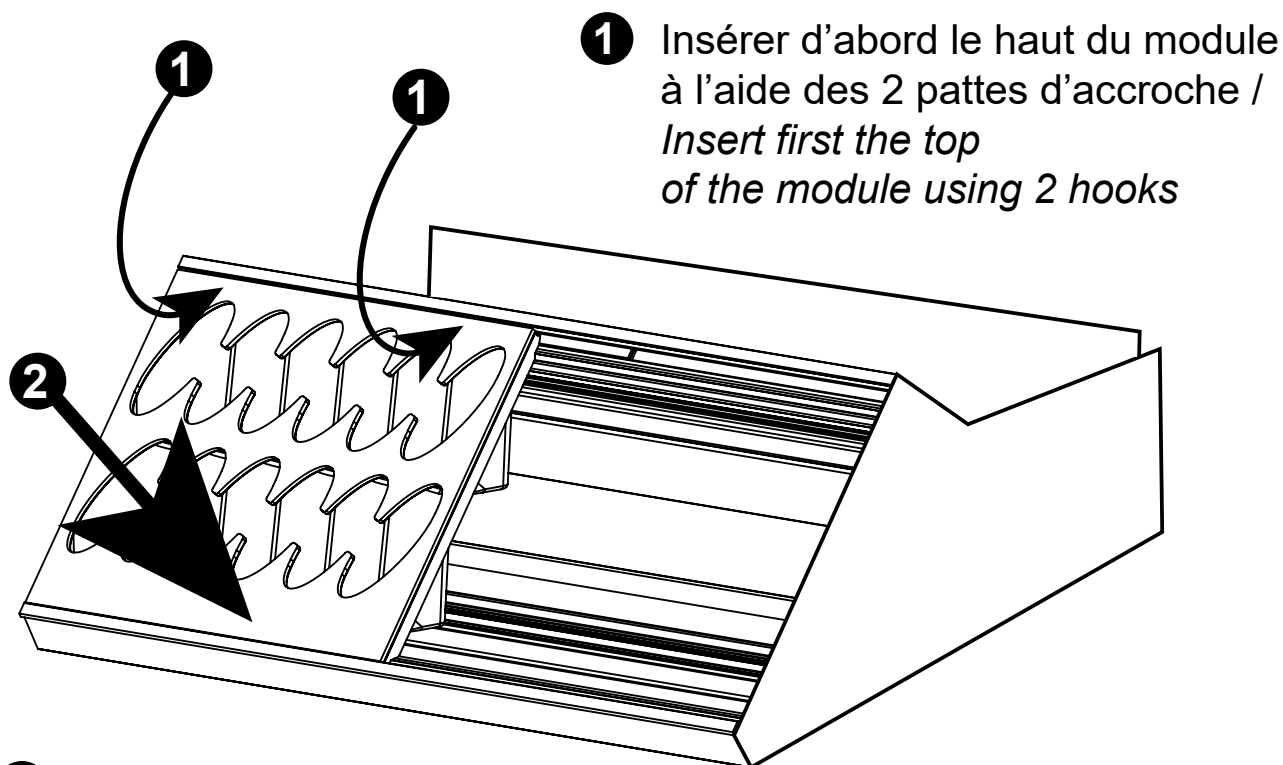

## NOMENCLATURE

Module générique / <i>Generic module</i>	Module capot simple / <i>Single hood module</i>	Module capot double / <i>Double hood module</i>
PMMA SR : 100%	PMMA SR : 76% TPU : 1% Métal / Iron : 1% Autre (Factice) / Other (Dummy) : 22%	PMMA SR : 84% TPU : 1% Métal / Iron : 1% Autre (Factice) / Other (Dummy) : 14%

